



# HOW TO USE THE RIVET ROUTER


Place cassette on firm protected surface. Position metal 'rivet locator' on top (label side) of cassette with hole toward flap.

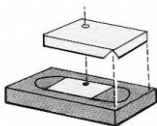


Insert threaded 'rivet router' in hole in 'locator'. While applying pressure, hand drill through plastic casing til resistance is felt. (The resulting hole will not harm the video tape image in any way.) Remove locator.

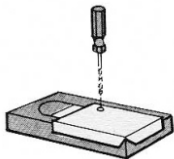

Insert 'punch' in hole in top of cassette, rap firmly with hammer to loosen rivet.

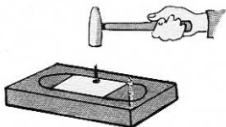

If necessary, place cassette on top of 'locator' to give rivet room to come out, tap 'punch' again to finish driving rivet out of cassette.

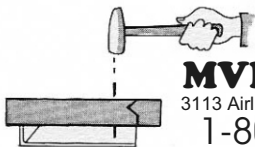

**MVI** • [www.mvipro.com](http://www.mvipro.com)  
PRODUCTIONS  
3113 Airlie St • Charlotte, NC 28205  
**1-800-289-0111**  
US Patent 4,765,050